

Date: 22-2-24 Rego: 224XIR Plant ID: 910

Make	Terex	Model	AC100/4
Service Type	250hr (Top)	Serial No:	10496
Service Hrs.	7,750hr 7,739	KM	3-7906
Next Service	8,000hr	Due (+/- 50Hr. Reading)	

Status type: Satisfactory ✓ Action Required \* Not Applicable NA

Status type: Satisfactory * Action Required * Not Applicable NA					
Description	Status	Action/ Comments			
250h	r / 750hr Ser	vice			
Check Hydraulic Pump PTO, Mounting & Bolts					
Check Transmission Oil Level	NA				
Check Transfer Case Oil Level	NA				
Check Transfer Case Cooler System for Leaks	NA				
Check Retarder Oil Level	NA				
Check ALL Differentials Oil Levels	NA				
Check Planetary Reduction (s) Oil Level	NA				
Check Susp Cylinder - Condition / Leaks / Positions	NA				
Check ALL Suspension components - wear / Tightness	NA				
Check ALL Drive / Jack Shaft Universal Joints	NA	100			
Check / Lube ALL Universal Joints on Drive Line	NA				
Check Brake Lining Thickness / Wear - record thickness	NA				
L/H R/H		Minimum Thickness = mm			
Axle 1					
Axle 2					
Axle 3					
Axle 4					
Check Park Brake Operation					
Check Service Brake Operation					
Check all covers, panels for security	1				
Drain ALL Air Tanks of Water / Sediments	/				
Check Diff Lock Operation	NA				
Inspect steering hoses	NA				
Inspect ALL steering links	NA				
Lube ALL axles, and steering knuckle bearing	NA				
Check Steering components	NA				
Lube suspension cylinder ends	NA				
Lube Slew Gear / Bearing	1/				
Check Slew Gear Level	//				
Lube Rope drum bearing	//				
Lube Hookblock	1				
Lube Main Boom Extension Bolts/sliding surfaces etc	/				



Lubricate slew gear open teeth		
Check for correct operation and Grease Sensors on SVE	-/-	
Inspect Main Boom Track Rollers	-/-	
Inspect Main Boom extension rope track rollers		
Visually Check Slew Bolts / Gear connections		
Visual check for cracks	/	
Check Winch Gearbox Oil Level	/	
Check Winch Rope Condition & Lubrication	1,	
Check Winch Unit Mountings & Bolts	/_	
Check Hydraulic Tank Oil Level	/,	Both Upper and Lower
Visual Inspection of ALL Boom Sect. Damage		
Lube Rear Boom Pivot Bearings	1	
Lube ALL Luff Cyl. Bearings	/	
Top up auto greaser (if fitted)	1	
Inspect ALL Sheaves on Boom Assy.		
Check ALL Hydraulics for Correct Operation	1	
Check ALL Hydraulic Cyl's for Damage/Leaks	1,	
Check ALL Hydraulic Hoses for Damage/Leaks		
Check ALL 'Crane Control Levers' for Operation	×,	The can Toustick huttons fouth
Check ALL Wiring for Damage & Correct Routing		of so prints control from
Check Battery Electrolyte Level		
Clean & Check Battery Terminals-Holding Clamp		
Check Brake Expanding Cylinders	NA	
Check & Tighten Axle retaining bolts, check axle screw		
conn.	NA	
Inspect steering and radius arms, bushes and ball joints	NA	
Visual Inspect Air Intake pipes & hoses	1	Upper & Lower Engines
Check Coolant & Inhibitor Level / Concentration	-/	Upper & Lower Engines
Check ALL Coolant / Heater System Hoses		Upper & Lower Engines
Visual Inspect Radiator Screen & Cooler Cores for	/	Upper & Lower Engines
Blockage		oppor di zono: zinginos
Check Fan Operation		Upper & Lower Engines
Check Alternator & A/C Compressor Mount/Bolts	/	Upper & Lower Engines
Check Engine Drive Belts	1	Upper & Lower Engines
Check Engine, Lines & Hoses for Abrasion & Position		Upper & Lower Engines
Check Engine Piping for Leaks	1	Upper & Lower Engines
Visual Inspect Engine Mount(s) Condition	-	Upper & Lower Engines
Spray all chrome cylinder rods	1	Oppor & Lower Engines
Check batteries for electolyte/ security	1	
Check Clearance Lights	1	
	-	
Check Step Lights	-	
Check Stop Lights	1	
Check Reverse Light(s) & Alarm	1	
Check Indicators & Audible Warning	-	
Check ALL Work Lights	-	
Check ALL Instruments for Operation/Illumination	1	
Check Low Air Warning Devices	/	
Check Horn(s)		I .



Charle Miner Organities		T
Check Wiper Operation	1	
Check ALL Warning Lights and Buzzers	-/-	
Check Exhaust Brake Operation ( where fitted )	/	
Check Rotating Light Operation	/	
Check Panel Condition	/	
Check Cabin Condition	/	
Check Interior Light Operation	/	
Check AM/FM Radio Operation If fitted	/	
Check Cabin for Water Leaks		
Check Door Locks & Catches for Operation	/	
Check Seat Mounting & Operation		
Refill Windscreen Washer Water & Test Operation Upper		
and Lower		
Check Seat Belt Condition / Operation		
Check Heater Operation		
Check Air Conditioning		
Check for Air Leaks ALL Points		
Check for Fuel Leaks ALL Points	1,	
Check for Oil Leaks in Engine Area	1	
Check Tyre Pressures & Tyre Condition	NA	
Carry Out FULL Function/Operate Test Drive	1,	
Check Hoist Limit Switch Operation	/	
Check all crane functions for correct operation		
Lift Test Weight if Available	NX	
Check LMI / SLI Operation / Calibration	1.	
Anti-Two Block Operational	1	
Boom Length & Angle Indicators	/	
Manual Boom Length & Angle Indicators		
Level Indicators	1.	
Operation & Safety Manuals	/	
2 Way Radios Condition / Operation	1	
Registration Valid & In Date	/	
	Name of the last o	



	THER NOTES:						
		error co					
*	Button	s/clicker	on Joy	stricks	showing	signs of	wear
-							
							-

Completed by:	Christian. C.	Mechanic / Fitter	22-2-24
	Name	Position	Date
	Sheldon V		22-2-24
	Name	Position	Date