

Date: 18-3-25 Rego: XQ90GD Plant ID: 941

Make	Terex	Model	MAC25
Service Type	250hr	Serial No:	251264
Service Hrs.	8,250hr 8226	KM	81921
Next Service	8,500hr	Due (+/- 50Hr. Reading)	

Status type: Satisfactory ✓ Action Required × Not Applicable NA

Status type: Satisfactory ✓ Action Required × Not Applicable NA						
Description	Status	Action/ Comments				
250hr / 750hr Service						
CABIN & CONTROLS						
Check EMERGENCY Steer Pump Operation		Refer Operator's Manual for Spec.				
Check Air Conditioning						
Check 2/4WD & HI/LO Operation						
Check 4WD Audible Warning						
Check Diff Lock Operation	1	8				
Check Holding Brake Operation	1					
Check Emergency Stop Button Operation						
Check Reversing and Winch Camera Operation	/					
Check AM/FM Radio Operation						
Check Heater Operation	1,					
Check Wiper Operation	1					
Refill Windscreen Washer Water & Test Operation						
Check Front Spring Lockout Operation						
Check Air Conditioning	1	200 bar activation pressure				
Check Park Brake Operation	1					
Check Foot Valve Operation	1					
Check ALL Warning Lights and Buzzers						
Check ALL Instruments for Operation/Illumination	1					
Check Indicators & Audible Warning	1					
Check Hazard Lights						
Check Horn(s)	1					
Check Hyd. Sys. Base Pressure - use Dash Gauge		Refer Operator Manual for Pressures				
Check Hyd. Sys. Max Pressure - use Dash Gauge		Refer Operator Manual for Pressures				
Check Steer Pressure at Full Lock (dash gauge)	1					
Check SLEW Light Operation	1					
Check ALL Hydraulics for Correct Operation	1					
Check ALL 'Crane Control Levers' for Operation	1/					
Check Clearance Lights	1/					
Check Head Lights HI/LO	1/					
Check Stop Lights	1/	1				
Check Reverse Light(s) & Alarm						



		1	
Check ALL Work Lights		/-	
Check Low Air Warning Devices			
Check Rotating Light Operation		1	
Check Interior Light Operation		1	
Check Cabin for Water Leaks		1	
Check Seat Mounting & Operation		1	
Check Seat Belt Condition		//	
Check Door Locks & Catches for Op	eration	1	
Check Panel Condition		1	
Check Cabin Condition		1	
Registration Valid & In Date			
	ENGINE BA	Y & TRANS	MISSION
Clean or Replace Air Filter ( Outer E		/	
Visual Inspect Radiator Screen & Co		1	
Blockage	Joici Colco loi	/	
Check Coolant & Inhibitor Level / Co	ncentration	7	
Check ALL Coolant / Heater System			
Visual Inspect Air Intake Pipes & Hos		-	
	562	-	
Tighten Intake Hose Clamps		-	
Check Fan Viscous Coupling	Maunt/Dalta	-/-	
Check Alternator & A/C Compressor	Mount/Boits	-	
Check Engine Drive Belt		-/-	
Check Engine Oil Level		//	
Check Engine, Lines & Hoses for Ab	rasion & Position	//	
Check Engine Piping for Leaks		//	
Visual Inspect Engine Mount(s) Cond	dition	1/	
Check for Fuel Leaks ALL Points		/	
Check for Oil Leaks in Engine Area	- 10	1,	*
Check Hydraulic Pump PTO, Mountii	ng & Bolts		
Check Transmission Oil Level			
For cranes AFTER serial no. 25324	<u>4:</u>	,	
Check Oil Service Condition Through	h Gear Selector Pad	/	Replace oil and filter if lower than 30% 42%
Check Filter Service Condition Throu	igh Gear Selector	/	
Pad		/	Replace oil and filter if display is reading (LO)
	DRIVE TRA	IN & SUSP	ENSION
Check Planetary Reduction (s) Oil Le		1	
Check Transfer Case Oil Level			Run at 1000 rpm for 1 min, then check immediately
Check Transfer Case Cooler System	for Flow & Leaks		
Check Front Differential Oil Level		/	
Check Rear Differential Oil Level		1	
		1	
Check Clamping Bolts Front & Rear Spring Packs Check ALL Springs for Broken Leaves			
		-	Refer Operators Manual for Tensions
Check Radius Rods/Front Torsion Arms Tightness Check ALL Drive / Jack Shaft Universal Joints		/	Trefer Operators Marida for Tensions
		-	
Lube ALL Universal Joints on Drive Line		-/-	Document thicknesses
Check Brake Shoe Thickness ( via in		-//	Document fulcylesses
Check Brake Pads Wear & Record R			Minimum Thioknoon - mm
L/H	R/H		Minimum Thickness = mm



Axle 1		
Axle 2		
Axle 3		
Axle 4		
Adjust ALL Service Brakes	/	
Drain ALL Air Tanks of Water / Sediments	1	
Check ALL Steering Pins / Bearings for Wear	1	
Lube ALL Steering Pins / Bearings	1	Use SBX-2 Grease
Tighten Steering Pin Bolts	/	Torque setting 312nM/230lb.ft
Inspect spring lockout retaining pins	/	As per Service bulletin SB0136
Inspect steering hoses	1	As per Service bulletin SB0069
Inspect steering cylinder rod clevis	1	As per Service bulletin SB0063
	M ASSEMB	
	MAGGEME	Refer Operator's Manual for Spec.
Adjust ALL Retract & Extension Ropes/Chains	+ /	Refer Service Bulletin SB0073
Check 2nd Extension Cylinder Anchor Pins  Partension Tolo Secondary Cylinder Hospital	+ /	Refer Service Bulletin SB0073  Refer Service Bulletin SB0038
Re-tension Tele Secondary Cylinder Hoses	+ /	Velei Selvice Dulletili SD0030
Retention internal secondary cylinder hose fittings	+-/-	
Check Winch Gearbox Oil Level	+	
Check Winch Brake Oil Level	-	
Check Winch Rope Condition & Lubrication		
Check Winch Unit Mountings & Bolts		
Visual Inspection of ALL Boom Sect. Damage/Bend		
Lube All Boom Sections, Sheaves & Wear Pads	1	
Inspect ALL Compensating Sheave Bearings		
Inspect ALL Sheaves on Boom Assy.	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	
Check Boom Rear Pivot Pins/Bearings for Movement	-	
Lube Rear Boom Pivot Bearings	-	Use SBX-2 Grease
Check Luff Cyl. Top/Bott Pins & Bearings Movement	/	
Lube ALL Luff Cyl. Bearings		Use SBX-2 Grease
	& FINAL C	· · · · · · · · · · · · · · · · · · ·
Check Center Pivot Bearings/Pins for Movement		Refer Service Bulletin SB0105, drawing MXA1013
Lube Centre Pivot Bearings ALL Points		Use SBX-2 Grease
Check Hydraulic Reservoir Oil Level	/	Boom Closed Up (Lowered & Retracted)
Check Counterweight Lifting Bolts for Wear & Damage	/	Refer Service Bulletin SB0093
Clean and visually inspect counterweight retention bolt		Refer Safety Notice EAF SN 17 001
for cracks		
Check counterweight buffers for hardening or cracking		Refer Safety Notice EAF SN 17 001
Check ALL Hydraulic Cyl's for Damage/Leaks	/	
Check ALL Hydraulic Hoses for Damage/Leaks		
Check ALL Wiring for Damage & Correct Routing		
Check for Air Leaks ALL Points		
Check Battery Electrolyte Level		
Clean & Check Battery Terminals-Holding Clamp		
Check Tyre Pressures & Tyre Condition	/	
Carry Out FULL Function/Operate Test Drive	/,	
Transmission Pre-select Downshift to 3rd		
Check Exhaust Brake Operation	/	
Lift Test Weight if Available	/	



Check LMI Calibration		
Anti-two block operational		
Boom length & angle indicators		
Manual boom length & angle indicators		
Level indicators	7,	
Emergency controls (E-Stops)		
Operation & safety manuals		
2 way radios condition / operation		

OTHER NOTES:		
40		
	2004	
8 8		

Completed by:	Chastian. C	Mechanic / Fitter 18 - 3 - 25	
*	Name	Position	Date
	Shelden U		18-3-25
	Name	Position	Date