



QF23Q.03
Jun-19

AT-40 Crane Service Schedule

Date: 26-6-26 Job No.: _____ Tech. Name: Mat R
 Serial No.: 400081 Service Type: 250 hr
 Owner's Details: _____
 Job Location: _____
 Make Of Equipment: _____ Model: _____ Serial No.: _____
 Carrier Engine Make: _____ Model: _____ Serial No.: _____
 Registration / Plant No.: _____ Vehicle Kms: 71934 Hours: 7734

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	250 / 750 Hour Service Schedule	Comments
CABIN & CONTROLS			
	☒	Check for EMERGENCY Steer Pump Errors	Self Test
	☒	Check Air Conditioning & Condition of Cabin Filter	Clean/replace filter if required
	☒	Check 2/4WD & HI/LO Operation	
	☒	Check Diff Lock Operation	
	☒	Check Holding Brake Operation	
	☒	Check All Emergency Stop Button Operation	
	☒	Check Reversing and Winch Camera Operation	
	☒	Check AM/FM Radio Operation	
	☒	Check Heater Operation	
	☒	Check Wiper Operation	
	☒	Refill Windscreen Washer Water & Test Operation	
	☒	Check Front Spring Lockout Operation	200 bar activation pressure
	☒	Check Park Brake Operation	
	☒	Check Foot Valve Operation	
	☒	Check ALL Warning Lights and Buzzers	
	☒	Check ALL Instruments for Operation/Illumination	
	☒	Check Indicators	
	☒	Check Hazard Lights	
	☒	Check Horn(s)	
	☒	Check Hyd. Sys. Base Pressure	Refer Operator Manual for Pressures
	☒	Check Hyd. Sys. Max Pressure	Refer Operator Manual for Pressures
	☒	Check Steer Pressure at Full Lock	Refer Operator Manual for Pressures
	☒	Check Articulation Sensor Operation	
	☒	Check ALL Hydraulics for Correct Operation	
	☒	Check Joystick Operation	
	☒	Check Clearance Lights	
	☒	Check Head Lights HI/LO	
	☒	Check Stop Lights	
	☒	Check Reverse Light(s) & Alarm	
	☒	Check ALL Work Lights	
	☒	Check Low Air Warning Devices	
	☒	Check Rotating Light Operation	
	☒	Check Interior Light Operation	

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	250 / 750 Hour Service Continued	Comments
	☒	Check Cabin for Water Leaks	
	☒	Check Seat Mounting & Operation	
	☒	Check Seat Belt Condition & Operation	
	☒	Check Door Locks & Catches for Operation	

ENGINE BAY & TRANSMISSION

	☒	Clean or Replace Air Filter (Outer Element Only)	
	☒	Visual Inspect Radiator Screen & Cooler Cores for Blockage	
	☒	Check Coolant & Inhibitor Level / Concentration	
	☒	Check ALL Coolant / Heater System Hoses	
	☒	Visual Inspect Air Intake Pipes & Hoses	Check for tightness, cracking/splitting
	☒	Tighten Intake Hose Clamps	
	☒	Check Fan Coupling	
	☒	Check Alternator & A/C Compressor Mount/Bolts	
	☒	Check Engine Drive Belt	
	☒	Check Engine Oil Level	
	☒	Check Engine, Lines & Hoses for Abrasion & Position	
	☒	Check Engine Piping for Leaks	
	☒	Visual Inspect Engine Mount(s) Condition	
	☒	Check for Fuel Leaks ALL Points	
	☒	Check for Oil Leaks in Engine Area	
	☒	Check Hydraulic Pump PTO, Mounting & Bolts	
	☒	Check Transmission Oil Level	
	☒	Check Oil Service Condition Through Gear Selector Pad	Replace oil and filter if lower than 30%
	☒	Check Filter Service Condition Through Gear Selector Pad	Replace oil and filter if display is reading (LO)

DRIVE TRAIN & TRANSFER CASE

DRIVE TRAIN & TRANSFER CASE

☒	Check Planetary Reduction (s) Oil Level					
☒	Check Transfer Case Oil Level	Run at 1000 rpm for 1 min, then check immediately				
☒	Check Transfer Case Cooler System for Flow & Leaks					
☒	Check All Differentials Oil Level					
☒	Check Susp Cylinder - Condition / Leaks / Positions					
☒	Check Suspension Cylinder Pivots					
☒	Check All Suspension Components - wear / tightness					
☒	Check All Steering Components - wear / tightness / hoses					
☒	Check centre bearing and housing; Jack Shaft & Front Shaft					
☒	Check ALL Drive / PTO / Jack Shaft Universal Joints					
☒	Lube ALL Universal Joints on Drive Line / PTO Shaft					
☒	Check Wheel Bearing Play					
☒	Check Brake Lining Thickness / Wear - record thickness	Minimum Thickness = 2 mm				
☒	Check brake rotor thickness	Minimum Thickness = 37 mm				
	L/H lining outer	inner	R/H lining inner	outer	L/H rotor	R/H rotor
☒	Axle 1					
☒	Axle 2					
☒	Axle 3					
☒	Drain ALL Air Tanks of Water / Sediments					
☒	Check ALL Steering Pins / Bearings for Wear					
☒	Lube ALL Steering Pins / Bearings				Use SBX2 Grease	
☒	Tighten Steering Pin Bolts				Torque setting 420Nm/310lb.ft	
☒	Check Service Brake Operation					
☒	Check Brake Expanding Cylinders					

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	250 / 750 Hour Service Continued	Comments
	☒	Check Low Air Warning Devices	
	☒	Lube Suspension Cylinder Bearings	Use SBX2 Grease
	☒	Check All Covers, Panels for Security	
	☒	Inspect steering hoses	As per Service bulletin SB0069
	☒	Inspect steering cylinders	

BOOM ASSEMBLY

	☒	Adjust ALL Retract & Extension Ropes/Chains	Refer Operator's Manual for Spec.
	☒	Check 2 nd Extension Cylinder Anchor Pins	
	☒	Re-tension Tele Secondary Cylinder Hoses	Refer Service Bulletin EAF SA 19 001
	☒	Retension internal secondary cylinder hose fittings	
	☒	Check Winch Gearbox Oil Level	
	☒	Check Winch Rope Condition & Lubrication	
	☒	Check Winch Unit Mountings & Bolts & Mounting Hinge	
	☒	Visual Inspection of ALL Boom Sect. Damage/Bend	
	☒	Lube All Boom Sections, Sheaves & Wear Pads	
	☒	Inspect Compensating Sheave Bearings	
	☒	Inspect ALL Sheaves on Boom Assy.	
	☒	Check Boom Rear Pivot Pins/Bearings for Movement	Adjust if required
	☒	Lube Rear Boom Pivot Bearings	Use SBX2 Grease
	☒	Check Luff Cyl. Top/Bott Pins & Bearings Movement	
	☒	Lube ALL Luff Cyl. Bearings	Use SBX2 Grease
	☒	Inspect retract assemble & wear pads	remove top inspection hatch cover
	☒	Inspect front side wear pad adjustment & fasteners	

CHASSIS & FINAL CHECKS

	☒	Check Center Pivot Bearings/Pins for Movement	Refer Service Bulletin SB0105, drawing T151816
	☒	Check counter weight pins/circlips for correct fitment	
	☒	Lube Centre Pivot Bearings ALL Points	Use SBX2 Grease
	☒	Check Hydraulic Reservoir Oil Level	Boom Closed Up (Lowered & Retracted)
	☒	Check Hydraulic Oil Level Sensor Operation	Refer to manual for spec. service
	☒	Check Central Lubrication System	
	☒	Check Hoist Limit Switch	
	☒	Check Lower Limit Switch	
	☒	Check ALL Hydraulic Cyl's for Damage/Leaks	
	☒	Check ALL Hydraulic Hoses for Damage/Leaks	
	☒	Check ALL Wiring for Damage & Correct Routing	
	☒	Check for Air Leaks ALL Points	
	☒	Check Battery Electrolyte Level	
	☒	Clean & Check Battery Terminals-Holding Clamp	
	☒	Check Tyre Pressures & Tyre Condition	120psi Front & Back
	☒	Carry Out FULL Function/Operate Test Drive	
	☒	Transmission Pre-select Downshift to 3rd	
	☒	Check Exhaust Brake Operation	
	☒	Lift Test Weight if Available	
	☒	Check LMI Calibration	
	☒	Re-Tension ALL Wheel nuts	Refer Operators Manual for Tension Settings
	☒	Top up auto greaser	Use SBX2 Grease

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	500 Hour Service Schedule	Comments
		Carry Out 250 Hour Service Schedule	
		Add the Following:	
		Change Engine Oil Filter	
		Change Engine Oil	
		Change Hydraulic Oil Return Filter	
		Change Transfer Case Oil	
		Change All Differential Oil	
		Change All Planetary Reduction(s) Oil	
		Adjust Rear Boom Pivot Bearings	
		Change Winch Gearbox Oil	
		Brakes - Air Dryer - Replace Granulate Cartridge	NOT Applicable on 100 Hour Service

R	C	1000 Hour Service Schedule	Comments
		Carry Out 250 / 750 Hour Service Schedule	
		Carry Out 500 Hour Service Schedule	
		Add the Following:	
		Change Primary (Outer) Air Filter Element	NOT Applicable on 100 Hour Service
		Change Safety (Inner) Air Filter Element	NOT Applicable on 100 Hour Service
		Replace Fuel Filter Element	
		Replace Fuel Pre-filter Element	
		Adjust Valve Clearances	
		Change Cylinder Head Valve Cover Gasket	Refer to Service Manual for Spec.
		Check & Clean Engine Breather	
		Sample Hydraulic Oil using Kit PP2128300	
		Change Auto Transmission Oil and filters	At 1000hrs or when instructed by oil/filter life monitor if sooner,
			Not applicable on 100 Hour Service. Not applicable to transmissions filled with synthetic oil.

R	C	2000 Hour Service Schedule	Comments
		Carry Out 250 / 750 Hour Service Schedule	
		Carry Out 500 Hour Service Schedule	
		Carry Out 1000 Hour Service Schedule	
		Add the Following:	
		Change Engine Coolant	
		Check Wear Pad "Clearance" & Boom Alignment	If Wear is Out Limits Strip & Remove ALL Pads
		Check Steering Accumulator Charge Pressure	50 Bar
		Check Front Suspension Accumulators Charge Pressure	50 Bar
		Check Rear Suspension Accumulators Charge Pressure	70 Bar

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	100 Hour First Service Schedule	Comments
		Carry Out 250 / 750 Hour Service Schedule	
		Carry Out 500 Hour Service Schedule	
		Carry Out 1000 Hour Service Schedule	
		<i>Add the Following:</i>	
		Tighten ALL Hose Clamps	
		Check Tension of ALL Engine mounts	Refer Parts Manual for Tension Settings
		Re-Tension ALL & Suspension Bolts	Refer Operators Manual for Tension Settings
		Re-Tension Centre Pivot Pins - Upper/Lower	Refer Operators Manual for Tension Settings
		Check & Adjust All Axle Alignment to Centre	Refer to Service Manual
		Tighten ALL Drive Shaft / Jack Shaft Flange Bolts	

		34	
--	--	----	--

Note: ALL items MUST be "Ticked" if carried out / "Crossed" if not carried out / marked "N/A" if not applicable.

R = Repair C = Completed

R	C	Additional Faults Identified Continued:
		35 2nd & 3rd AXLE BRAKE LOW (LIGHT NOT ON YET).
		36
		37
		38
		39
		40
		41
		42
		43
		44
		45
		46
		47
		48
		49
		50
		51
		52
		53
		54
		55
		56
		57
		58
		59
		60
		61
		62

Service carried out by:

Cher

Signature:

Christian Cavell

Service carried out by:

Sheldan V

Signature:

J. Van 28-6-26